

warmlite
heating the heart of the home

2000W
FLAT FAN HEATER

YOUR SAFETY &
INSTRUCTION MANUAL
PLEASE READ CAREFULLY

MODEL **WL44004/WL44004DT**



WARNING!

This product is only suitable for well insulated spaces or occasional use.



www.warmlite.co

TECHNICAL DATA

Description:	Flat Fan Heater
Model:	WL44004
Rated Voltage:	220 - 240V
Frequency:	~ 50Hz
Power consumption:	2000W

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RK Wholesale LTD Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials of workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.


The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RK Wholesale LTD has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.

See back page for details.

WIRING SAFETY FOR UK USE ONLY

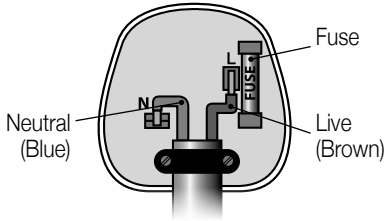

IMPORTANT

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:


The wires in the mains lead are coloured in accordance with the following code:

Blue neutral [N] Brown live [L]

Plug Fitting Details (Where Applicable).

The wire coloured blue is the neutral and must be connected to the terminal marked [N] or coloured black.

The wire coloured brown is the live wire and must be connected to the terminal marked [L] or coloured red.

On no account must either the brown or the blue wire be connected to the [EARTH] terminal .

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-Rewireable Mains Plug.

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug – disconnect it from the mains – and then cut it off of the mains lead and immediately dispose of it in a safe manner. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

WARNING:

This appliance is double insulated.
Do not connect any wire to the earth terminal.

PRODUCT SAFETY

When using **any** electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- **DO NOT** let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- **DO NOT** carry the appliance by the power cord.
- The use of accessory attachments is not recommended by the appliance manufacturer apart from those supplied with this product. **DO NOT** use extension cords with the appliance.
- **DO NOT** pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- **DO NOT** use this product for anything other than its intended use.
- This appliance is for household use only.
- Please ensure that the appliance is used on a stable, level, and heat resistant surface.
- **DO NOT** immerse cords, plugs or any part of the appliance in water or any other liquid.

- This appliance is for household use only.
- **DO NOT** use the appliance outdoors.
- Always ensure that the heater is placed on a firm level surface. Ensure that the heater is not positioned close to curtains, furniture or any combustible materials as this could create a fire hazard.
- The heater must not be located immediately below a mains socket outlet.
- This product is only suitable for well-insulated spaces and occasional use.
- **DO NOT** cover the heater as this may lead to a fire risk.
- **DO NOT** obstruct any of the openings of the heater.
- **DO NOT** insert any object through any openings on the heater.
- Check all inlets and outlets from time to time for accumulated dust.
- **DO NOT** use the heater in areas where flammable liquids are stored or where flammable fumes may be present.
- **DO NOT** operate the heater on a timer, or leave on overnight.
- When not being used, please unplug the heater from the mains socket.
- Keep the mains lead away from the hot body of the heater and ensure that it is not pulled tight between the socket and the heater.
- **DO NOT** use the heater in the immediate surroundings of a bath, a shower, a swimming pool or similar indoor locations.
- Always unplug the heater and allow it to cool before moving it from one location to another.
- **DO NOT** attempt to dismantle or repair any part of the heater. This should only be done by a qualified service agent..
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the Customer Support Team.




WHAT'S IN THE BOX

Instruction Manual

Flat Fan Heater

1. Inlet Vent
2. Temperature Control
3. Heat Setting Control
4. Outlet Vent

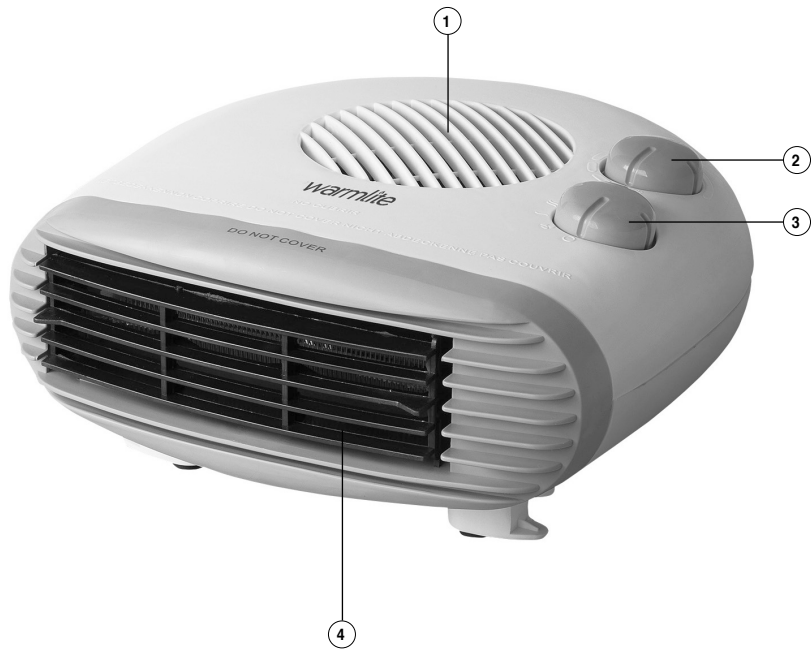

WARNING!

This product is only suitable for well insulated spaces or occasional use.

BEFORE YOUR FIRST USE:

1. Remove your appliance from the packaging.
2. Locate your appliance in accordance with the safety instructions.
3. Plug the appliance into the mains supply.
4. Your appliance is now ready for normal use.

Dispose of the packaging in a responsible manner.



USING YOUR APPLIANCE

1. Ensure that the appliance is sited away from furniture curtains and the power cable will not cause a trip hazard.
2. Unwind the Power Cord and plug it into the Power Outlet and switch on at the wall socket.
3. To activate the heater, turn the Heat Setting Control clockwise. Turn it to the first setting for the fan function.
4. Turn the Heat Setting Control dial clockwise to the second setting for low power (1000W), and to the third setting for maximum power (2000W).
5. Turn temperature control dial clockwise to increase the temperature and when the temperature has reached a comfortable level slowly turn the temperature control dial anti clockwise until the thermostat indication light goes out.

CLEANING AND CARE

- Be sure to switch off power supply at the wall socket and disconnect the plug before commencing cleaning.
- Wait for the heater to cool down fully before commencing cleaning.
- ONLY Clean the body of the heater with a damp cloth.
- DO NOT ALLOW water into the appliance.
- Never use soap or chemicals which may damage the housing of the heater.
- Allow sufficient drying time before operating again.
- Clean the air inlets and outlets regularly with a vacuum cleaner (at least twice a year).
- When the unit is not in use. We recommend that the heater is re-packed in its original packaging and stored in a cool, dry place.

AUTO SAFETY CUT OFF

The heater has a built-in safety device, which will switch the heater off in case of accidental overheating.

To reset the heater, follow the next steps:

1. Turn the dials off.
2. Unplug the heater and wait 5-10 minutes for the unit to cool down.
3. After the unit has cooled, plug it in and operate normally.

WARNING:

DO NOT IMMERSE ANY ELECTRICAL PART OF THE APPLIANCE IN WATER SUCH AS MOTOR UNITS OR PLUGS.

PLEASE SEE CLEANING SECTION FOR FURTHER INSTRUCTIONS.



DISPOSAL OF THE UNIT

Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately.

Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items.

Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland.

The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill.

Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



Model Identifier(s): WL44004/WL44004DT					
Item	Symbol	Valve	Unit	Item	Unit
Heat Output			Type of heat input for electric storage, local space heaters only (select one)		
Nominal heat output	P _{nom}	1,8 -2,0	kW	Manual heat charge with integrated thermostat	No
Minimum heat output (indicative)	P _{min}	0.015	kW	Manual heat charge control with room and/or outdoor temperature feedback	No
Maximum continuous heat output	P _{max, c}	2	kW	Electronic heat charge control with room and/or outdoor temperature feedback	No
Auxiliary electricity consumption				Fan assisted heat output	No
At nominal heat output	e _{lmax}	0	kW	Type of heat output/room temperature control (select one)	
At minimum heat output	e _{lmin}	0	kW	Single stage heat output and no room temperature control	No
In standby mode	e _{lSB}	0	kW	Two or more manual stages, no room temperature control	No
				With mechanic thermostat room temperature control	Yes
				With electronic room temperature control	No
				Electronic room temperature control plus day timer	No
				Electronic room temperature control plus week timer	No
				Other control options (multiple selections possible)	
				Room temperature control with presence detection	No
				Room temperature control with open window detection	No
				With distance control option	No
				With adaptive start control	No
				With working time limitation	No
				With black bulb sensor	No
Contact Details:	Imported by RK Wholesale LTD., Berryhill Road, Stoke-on-Trent ST4 2NL				



NOTES

<hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/>	<hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/> <hr/>
---	---



NOTES

Two columns of horizontal lines for writing notes.

We hope you enjoy your appliance for many years.

As a thank you for purchasing one of our fantastic products,
we are offering you an extra 1 year peace of mind.

*To receive your extra guarantee period, register your appliance online
within 28 days of purchase by visiting:

www.warmlite.co

Make sure to retain your original receipt.



**Should you have a problem
with your appliance or need any spare parts please call our
Customer Support Team on:**

+44 (0) 333 220 6056

Distributed throughout the UK by RK Wholesale LTD

warmlite
heating the heart of the home

0220.V5